


# Product sheet

**KitchenAid**




## Quick Guide

Carefully read the user handbook provided before using the appliance.

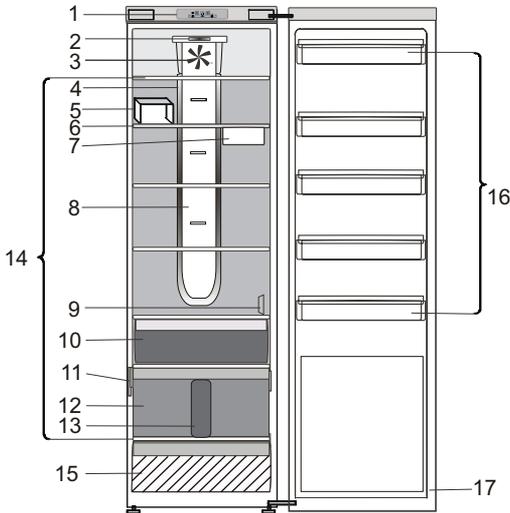

### Refrigerator Compartment

 1. Control panel
2. Main LED's lighting
3. Fan with antibacterial and anti-odour filter
4. Lighting in Multi-flow
5. Cheese box + Lid
6. Wooden shelf
7. Box
8. Multi-flow cold air area
9. Sensor cover
10. Special "FRESH 0°" compartment (to keep foods fresher for longer)
11. Rating plate with commercial name
12. Cooler compartment (best for meat and fish)
13. Crisper divider
14. Shelves
15. Fruits and vegetables crisper
16. Door trays
17. Door seal



**Note:** All shelves, door trays and racks are removable.

The ideal food storage temperatures are already factory-set.


**The characteristics, technical data and images may vary according to the model.**

### HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

## Control panel

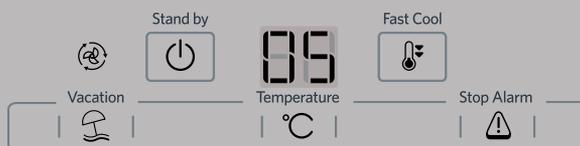

### On/Stand-by

To put the product in Stand-by, press and hold the button for 3 seconds.

All the icons turn off except On/ Standby indicator. To reactivate the appliance press once (briefly) this button.

**Note:** this operation does not disconnect the appliance from the power supply.

### Temperature button

Press the Temperature button to change the temperature: the value changes cyclically between 8°C ad 2°C.

**Note:** Displayed set points correspond to the average temperature throughout the whole refrigerator.

### Vacation Mode

This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. Before activating the feature, all perishable food should be removed from the refrigeration compartment and make sure that the door is closed properly, since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C).

**To activate/deactivate** press the Vacation mode button for 3 seconds. When the function is enabled, the related symbol will light up and the temperature of the refrigerator compartment will be set to a higher setpoint (the temperature display will show the new temperature setpoint of +12°C).

Changing the temperature setpoint will automatically deactivate the function.

### Fan

The Fan improves temperature distribution inside the product, allowing better preservation of stored food.

By default, the fan is switched on.

**To switch off the FAN** press and hold Vacation  and Stop Alarm  buttons at the same time for 3 seconds until an audible signal sounds and fan icon  will turn off as confirmation that the fan has been switched off.

To switched on the FAN repeat the same procedure.

As a confirmation audible signal sounds and the icon turns on.

**Note:** Reasons why switch off the fan look for "ENERGY-SAVING TIPS" in the Instructions for Use.

### Refrigerator compartment temperature

A different temperature can be set using the "Temperature" button.

### Fast Cool Function

Using Fast Cool function  it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button  to activate Fast Cool function. When activated, the Fast Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fast Cool button  again.

### Stop Alarm

Press in case of alarm to mute the acoustic alarm.



What to do if...	Possible causes	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be a problem with the power supply to the appliance.	Activate the appliance with the On/Standby button. Make sure: <ul style="list-style-type: none"> <li>- there is no power cut</li> <li>- the plug is properly inserted in the socket and that any double-pole mains switch is in the correct position (i.e. allowing the appliance to be powered)</li> <li>- the household electrical system protection devices are in good working order</li> <li>- the power supply cable is not damaged.</li> </ul>
The inside light does not work.	The light may need replacing.	Models with LED lights: contact the authorised Service Centre.
	The appliance could be in On/Standby mode.	Activate the appliance with the On/Standby button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Make sure: <ul style="list-style-type: none"> <li>- the doors close properly</li> <li>- the appliance is not installed near a heat source</li> <li>- the set temperature is adequate</li> <li>- the air circulation through the vents at the bottom of the appliance is not obstructed.</li> </ul>
Water collects on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning").
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation.	No solution is necessary.
The red led  flashes and an acoustic signal sounds.	Door open alarm Activates when the refrigerator compartment door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
The red led  lights up, an acoustic signal sounds and the letter "F" flashes on the display.	Malfunction Alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre. Press the "Stop Alarm" button briefly to deactivate the acoustic signal.

**Note:** it is normal for the refrigeration system to produce some noises, such as gurgling and hissing.







FOR THE WAY IT'S MADE.

Printed in Italy

02/17

19514595301

